


The days are getting longer - with the Victory 56 FL.



Victory 8x56 T* FL
Victory 10x56 T* FL

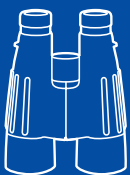

We make it visible.




The highlight of the Morning program.

The deerstand at dawn with the new Victory 56 FL.

Sitting on the deerstand at dawn with fine binoculars is the morning “television” program for the hunter – an almost philosophical expression of the hunting enthusiast.

So true. My binoculars would have to provide the best performance, early and late, in all light, so I purchased the new ZEISS Victory 8 x 56 FL.

I wanted to find that out on the deerstand. In the early light of dawn I first observed the six-pointer through my old binoculars; also an 8 x 56. Almost like a silhouette where you could easily make out the rack, but would have to guess the details. With my new ZEISS Victory 8 x 56, every tine stood out clearly, every nub and even the pearling on the antlers. A bright and sharp image, as if the magnificent buck would stand there in the early sun – a sight not easy to forget. For me it was a completely new viewing experience.

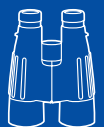

Excellent.

With new materials, advances in tempering technology and modern production processes, Carl Zeiss has introduced revolutionary improvements to our tried and tested 56-series binoculars for hunting during twilight hours and night viewing.

The result of this development is the new 8x and 10x 56 Victory FL binoculars from Carl Zeiss. The Victory 56FLs provide a previously unknown image quality due to the use of fluoride glasses. They distinguish themselves with superior brightness and twilight performance as well as excellent ergonomics.

Victory 8x56 T* FL

The traditional hunting binoculars for highest demands when used at dusk or at dawn. The "classic" with its 8x magnification and new high performance optic provides brilliant image performance at a field of view of 390 ft at 1000 yds.



Victory 8x56 T FL*

Victory 10x56 T FL*

Victory 10x56 T* FL

10x magnification provides maximum recognition of details even at great distances. With newly designed optics and excellent transmission and twilight performance, these binoculars are ideally suited for the deerstand, and yet focus to only 9.8 feet for close up observation.

Drive knob Dual-Drive: raised for diopter compensation, pushed-in to focus.

Ergonomically designed eye cups with fitting eye piece cover: quick and easy to use.


Eye cups with rotary mechanism: height may be locked in 4 settings, no unintentional pushing-in possible.



Let's Take A Look Inside!

The kind of intricate technology that is hidden on the inside of ZEISS binoculars is hard to imagine. The individual components are assembled to fit accurately and precisely adjusted. Despite its precise interior, the ZEISS Victory FLs are extremely rugged.

Shock proof and impact resistant, the housing is water and dust proof as well and nitrogen-filled. A permanent quality control ensures the high standard and long service life of your ZEISS binoculars.

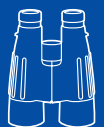

The Extras:

This changes your Victory FL to a telescope: Simply add the ZEISS Mono 3 x 12 with adapter ring and you are now watching with either 24x or 30x magnification, depending on the model. The use of a tripod is recommended. Mount the Victory FL with tripod holder onto the tripod.



Tripod: Order-No. 1206.889
 Binofix tripod adapter: Order-No. 528387
 ZEISS Mono 3 x 12: Order-No. 522012
 Adapter for Mono 3 x 12: Order-No. 528377



Objective lens/Eyepiece protection: The covers protect the lenses of objective and eyepieces effectively from dust and water drops and prevent damages during transport.

Objective lens protection: Order-No. 529224
 Eyepiece protection*: Order-No. 529223*

The comfortable wide carry strap can be fastened and removed easily and quickly from the binoculars.*

Order-No. 529119

Your Victory FL binoculars are safe in the high-quality and robust Cordura bag.*

Order-No. 1379.711

** included in the delivery scope*





The Victory FL Family

The FL-binoculars offer extraordinary brilliance with its use of fluoride containing glasses. Color fidelity and thus true to nature image reproduction. In addition, these products exhibit maximum transmission data and the most minute stray light fractions from top products made in Germany.

The innovative technology of the Victory 58 FL in an overview

- New objective type Superachromat with fluoride containing glass: optimum border contrast and less chromatic aberration
- Newly calculated optics with consequent utilization of the benefits of the ZEISS Advanced Optics Systems: handy binoculars with excellent image quality
- Maximum twilight performance: phase-corrected Abbe-König-Prisms and ZEISS T* multilayer coating on all glass-air surfaces in the interior for a phenomenal transmission of more than 90%.
- Fiberglass reinforced polyamide housing with high-strength aluminum for maximum ruggedness and stability
- New mechanics with many well-thought-through detail solutions, optimum ergonomics and grip
- New wide angle eyepieces for eyeglass wearers: excellent fields of view from 130 resp. 110 m to 1,000 m
- Eye relief of 16 mm for 100% clarity of the large field of view, even for eyeglass wearers
- Water and dust proof, nitrogen-filled to prevent fogging of the internal optic components



Victory Diascope 65/85 T FL*



Victory 8/10x32 T FL*



Victory 7/8/10x42 T FL*





Victory 8/10x56 T FL*

All FL models are also available in green.



The Technical Data At A Glance:

	Victory FL Binoculars	
	Victory 8x56 T* FL	Victory 10x56 T* FL
		
Magnification	8	10
Objective lens diameter (mm)	56	56
Field of view (m/1.000m) / (ft/1000 yds)	130 WW / 390 WW	110 WW / 330 WW
Eye-relief (mm)	16,0	16,0
Adjustment range infinite to (m) / (ft)	3,0 / 9.8	3,0 / 9.8
Adjustment range opalescent - (dpt)	7	7
Diopter compensation +/- (dpt)	4	4
Twilight factor	21,2	23,7
Diameter exit pupil (mm)	7,0	5,6
Geometric brightness	49,0	31,4
Interpupil from/to (mm)	55-76	55-76
Length (eye cup extended) (mm)	200	200
Width maximum (mm)	158	158
Width at 65 mm interpupil (mm)	145	145
Weight (g) (oz)	1220 / 43	1250 / 44
Order Number	52 56 08	52 56 10
Order Number green	52 56 11	52 56 12
FL = Fluoride glasses T* = ZEISS Multicoating		

Carl Zeiss
Sports Optics
Gloelstraße 3-5
35576 Wetzlar
www.zeiss.de/sportsoptics

The right is reserved to modify design and delivery scope serving the interests of further technical development without prior notice.
1395-259 Printed in Germany NP-01/2006